

CASECORE

game props for your events

Expander Case - Guess the code

User Manual



Casecore Games © 2024
www.casecoregames.com



Important safety instructions

- Before using the product, read these instructions carefully. Keep this document in a safe place for future reference.
- Only use this device in dry, clean and well ventilated places, minimum clearances for ventilation are top: 10cm, rear: 10cm, sides 10 cm.
- Keep the device away from any heat sources, vibrations, direct sunlight and water.
- Do not place any objects on top of the device, do not cover with cloths, paper or other materials that may obstruct heat radiation.
- Always make sure the device is powered off when storing.
- Do not plug this device directly into the wall socket with USB cable, as it may cause an electrical shock, fire, damage to the unit and/or personal injury.
- Do not use the device installed upside-down.
- Do not use force on any prop elements.
- This device should not be used by children without supervision of adults.
- Only input voltage specified for this unit can be used. Using higher voltage can be dangerous and may cause fire, damage the unit and/or personal injury. Cascore will not be held responsible for any damage resulting from the use of this unit with a voltage other than specified.
- Do not attempt to modify or fix this unit without contacting Cascore Games.
- The front panel of the unit should not be lifted without contacting Cascore Games.
- Don't leave the device powered when storing.
- **To power the device use a stable 5V DC / 1A power supply.**

1. Intended use of the device

This device is designed as a game prop and should not be used in any other way.

1.1 Handle with care

The device was made as durable and robust as possible but fragile electronic connections inside might be damaged on serious impacts, therefore move it with care using two hands, avoid using a handle to carry it.

1.2 Specifications of the unit

Model	Expander Case Guess the code
Dimensions (Width x Height x Depth)	270 x 246 x 124 mm
Weight	3.5 kg
Tilt Range	45°
Operating Temperature	0°C to 35°C
Operating Humidity	< 80%
Input power	5V DC / 1A



CAUTION! DO NOT PUT IN DOMESTIC WASTE.

This marking means that the product cannot be discarded with other wastes. To prevent potential damage to the environment or health, used up the product must be recycled. In accordance with applicable law, unfit electrical equipment must be collected separately, at specially designated places for them to be processed and re-processed, based on applicable environmental protection standards.



2.1 Powering the prop

To use the device, 5V DC power needs to be connected to the slot at the back of the prop. Normally an external power bank along with USB cable is used, so the players can power the case by themselves during the game as an additional task to perform.

Some of the new Explorer Case versions might have a power output slot, so the players can use the power from the main case to power up the add-ons.

3. Operating the device

This device functions as a standalone mini-game. For models sold from May 2024 onwards, users can enter service mode to modify the final code. For earlier models, the code displayed at the end of the game is fixed and cannot be changed.

To begin using the device, connect it to a power source, such as an output from the Explorer Case / Explorer Case Pro or an external power bank. Upon connection, the device is immediately operational.

Each time the device is powered, a random code is generated. The objective for players is to discover this secret code through a process of trial and error:

- Pressing any of the four metal buttons will increase the corresponding digit in the code by one.
- Pressing the middle red button allows players to verify if any of the digits are correct.
- For each digit correctly set, one green LED will illuminate.
- If the code displayed matches the randomly generated code, the device will emit a beep and briefly display the correct solution code.

4. Changing the final code (for models made after 05.2024)

1. Power on the device.
2. Press all the metal buttons at the same time.
3. A code will be displayed and LED diodes will change to yellow.
4. Press metal buttons to set the new code.
5. Press the big red button to save it.

5. Additional support

If you have more questions or you are having troubles setting up your prop, you can contact us here:

<https://casecoregames.com/contact-us>

Thank you for buying our products!

Emil Cychylik

Lead Designer at Casecore Games